

LANDSCAPE RAKE

MODELS LR, LLR, MLR, LRC, CLR


Revised: 05/22

MATERIAL HANDLING PARTS MANUAL

PARTS MANUAL SECTION 12



An Operator's Manual was shipped with the equipment. The Operator's Manual is an integral part of the safe operation of this machine and must be maintained with the unit at all times. READ, UNDERSTAND, and FOLLOW the Safety and Operation Instructions contained in this manual before operating the equipment. If the Operator's Manual is not with the equipment, contact your dealer or Bush Hog to obtain a Free copy before operating the equipment.

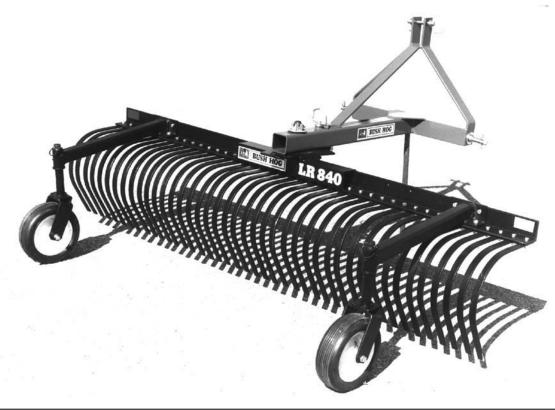

BUSH HOG®

2501 Griffin Ave. Selma, AL 36703 Parts Ordering 1-800-304-2836 www.bushhog.com

ATTENCIÓN!

LEA EL INSTRUCTIVO

Si No Lee Ingles, Pida Ayuda a Alguien Que Si Lo Lea Para Que le Traduzca las Medidas de Sequridad.





© 2013 Alamo Group Inc.

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this section.

- 1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.
- 2. The Purchase Order must include the name and address of the person or organization ordering the parts, who should be charged, and if possible, the serial number of the machine for which the parts are ordered.
- 3. The Purchase Order must clearly list the quantity of each part, the complete and correct part number (be sure to include all periods), and the basic name of the part.
- 4. The Manufacturer reserves the right to substitute parts where applicable.
- 5. Some parts are unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a Purchase Order.
- 6. The Manufacturer reserves the right to change prices without prior notice.



For maximum safety and to guarantee optimum product reliability, always use genuine BUSH HOG Parts. The use of inferior replacement parts may causepremature or catastrophic failure which could result in serious injury or death. Direct any questions regarding parts to:

BUSH HOG2501 Griffin Ave.
Selma, AL 36703
www.bushhog.com
Contact Us
800-304-2836



To the Owner/Operator/Dealer

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.

BEFORE YOU START! Read the safety messages on the implement and shown in your manual. Observe the rules of safety and common sense!



WARRANTY INFORMATION:

Read and understand the complete Warranty Statement found in this Manual. Fill out the Warranty RegistrationForm in full and return it to within 30 Days. Make certain the Serial Number of the Machine is recorded on the Warranty Card and on the Warranty Form that you retain.

LIMITED WARRANTY



Bush Hog warrants to the original purchaser of any new Bush Hog equipment, purchased from an authorized Bush Hog dealer, that the equipment be free from defects in material and workmanship for a period of one (1) year for non-commercial, state and municipalities' use and ninety (90) days for commercial use from date of retail sale. The obligation of Bush Hog to the purchaser under this warranty is limited to the repair or replacement of defective parts.

Replacement or repair parts installed in the equipment covered by this limited warranty are warranted for ninety (90) days from the date of purchase of such part or to the expiration of the applicable new equipment warranty period, whichever occurs later. Warranted parts shall be provided at no cost to the user at an authorized Bush Hog dealer during regular working hours. Bush Hog reserves the right to inspect any equipment or parts which are claimed to have been defective in material or workmanship.

DISCLAIMER OF IMPLIED WARRANTIES & CONSEQUENTIAL DAMAGES

Bush Hog's obligation under this limited warranty, to the extent allowed by law, is in lieu of all warranties, implied or expressed, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE and any liability for incidental and consequential damages with respect to the sale or use of the items warranted. Such incidental and consequential damages shall include but not be limited to: transportation charges other than normal freight charges; cost of installation other than cost approved by Bush Hog; duty; taxes; charges for normal service or adjustment; loss of crops or any other loss of income; rental of substitute equipment, expenses due to loss, damage, detention or delay in the delivery of equipment or parts resulting from acts beyond the control of Bush Hog.

THIS LIMITED WARRANTY SHALL NOT APPLY:

- 1. To vendor items which carry their own warranties, such as engines, tires, and tubes.
- 2. If the unit has been subjected to misapplication, abuse, misuse, negligence, fire or other accident.
- 3. If parts not made or supplied by Bush Hog have been used in connection with the unit, if, in the sole judgement of Bush Hog such use affects its performance, stability or reliability.
- 4. If the unit has been altered or repaired outside of an authorized Bush Hog dealership in a manner which, in the sole judgement of Bush Hog, affects its performance, stability or reliability.
- 5. To normal maintenance service and normal replacement items such as gearbox lubricant, hydraulic fluid, worn blades, or to normal deterioration of such things as belts and exterior finish due to use or exposure.
- 6. To expendable or wear items such as teeth, chains, sprockets, belts, springs and any other items that in the company's sole judgement is a wear item.

NO EMPLOYEE OR REPRESENTATIVE OF BUSH HOG IS AUTHORIZED TO CHANGE THIS LIMITED WARRANTY IN ANY WAY OR GRANT ANY OTHER WARRANTY UNLESS SUCH CHANGE IS MADE IN WRITING AND SIGNED BY BUSH HOG'S SERVICE MANAGER, 2501 GRIFFIN AVE., SELMA, ALABAMA 36703.

****	*****
Record the model number, serial number and date	MODEL NUMBER
purchased. This information will be helpful to your dealer if parts or service are required.	SERIAL NUMBER
	DATE OF RETAIL SALE
MAKE CERTAIN THE WARRANTY	


HAS BEEN FILED WITH BUSH HOG


SELMA, ALABAMA

LANDSCAPE RAKE

TABLE OF CONTENTS

CONTENTS	PAGE
LR Landscape Rake	12-1-1, 12-1-2
LLR Landscape Rake, Light Duty	12-2-1
MLR Landscape Rake, Medium Duty	12-2-2 – 12-2-5
LRC Landscape Rake	12-3-1
Gauge Wheel Assemblies	12-1-2, 12-2-5
CLR Landscape Rake	12-4-1

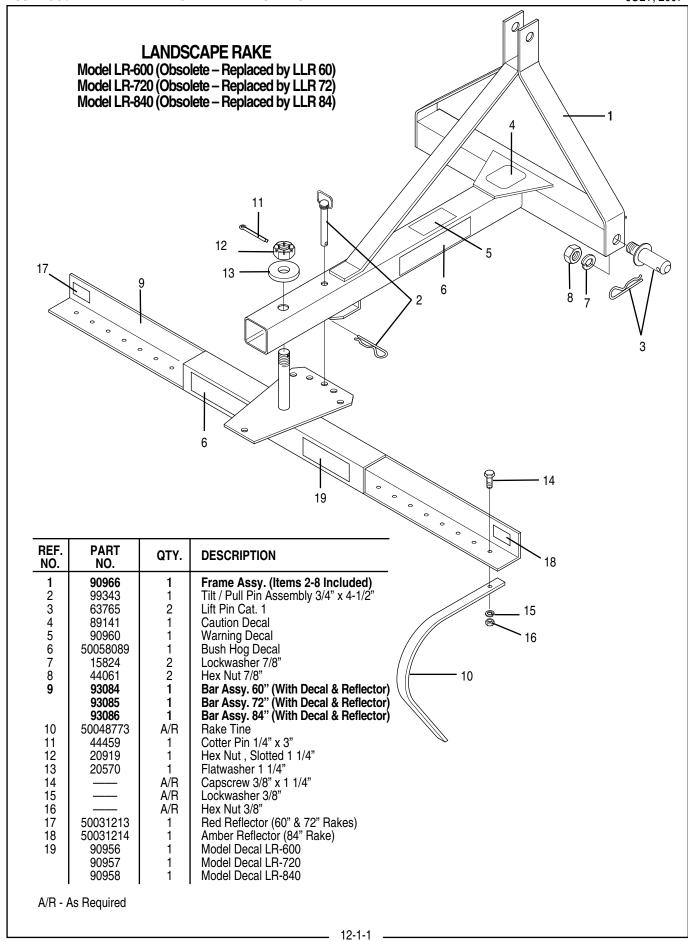


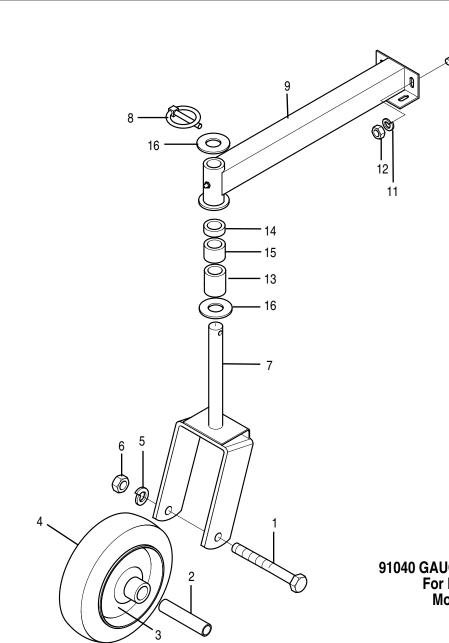



91040 GAUGE WHEEL ASSEMBLY For Landscape Rake Models LR & LLR

10

REF. NO.	PART NO.	QTY.	DESCRIPTION
1 2 3 4 5 6 7 8 9	44030 88970 91032 91033	1 1 1 1	Capscrew 1/2" x 5" Gr.5 Wheel Tube Wheel Tire Lockwasher 1/2"
6 7 8 9 10 11 12 13 14 15	91034 20312 91036 ————————————————————————————————————	1 1 1 4 4 1 1 3 2	Hex Nut 1/2" Caster Spring Pin Arm Capscrew 3/8" x 1 1/2" Gr.5 Lockwasher 3/8" Hex Nut 3/8" Spacer 1 1/2" Spacer 1/2" Spacer 1"

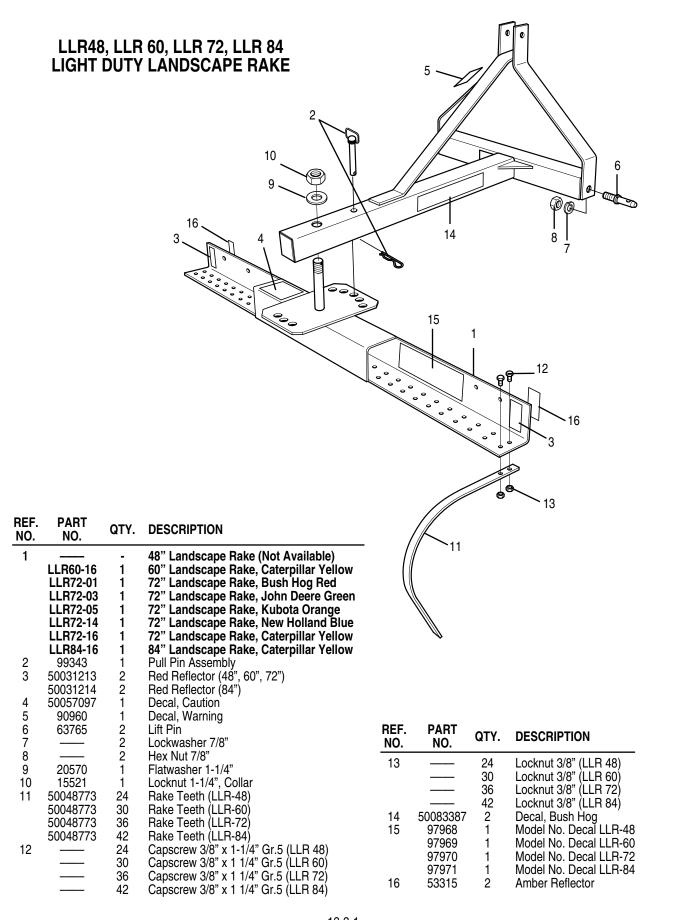

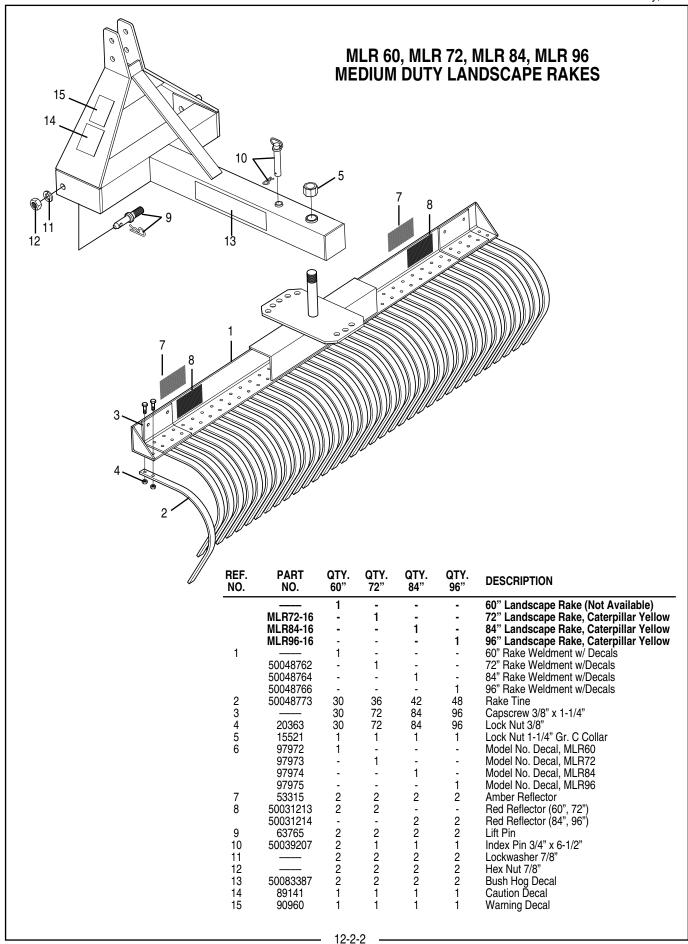

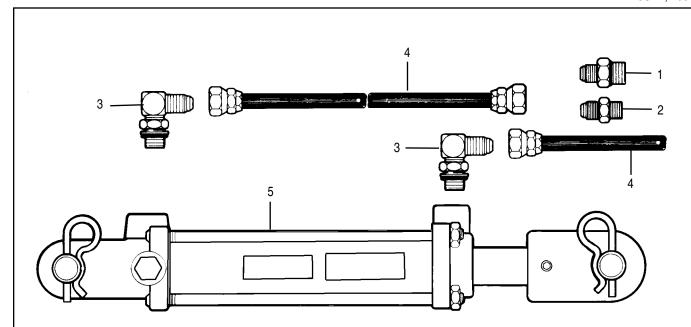



97978 HYDRAULIC CYLINDER KIT For MLR Landscape Rake

REF. NO.	Part No.	QTY.	DESCRIPTION
1	53340	2	Adaptor 9/16" JIC to 3/4" SAE
2	24-6-434	2	Adaptor 9/16" JIC to 1/2" NPT
3	14-40-98	2	90° Elbow 3/4" ORB to 9/16" JIC
4	62427	2	Hydraulic Hose 144"
5	50047479	1	Hydraulic Cylinder Assy

1817 RATCHET ASSEMBLY For MLR Landscape Rake

REF. NO.	PART NO.	QTY.	DESCRIPTION
1 2 3 4	50028265 50028264 11810	2 4 1	Pin Clip Pin Handle Cotter Pin 1/4" x 1-3/4"

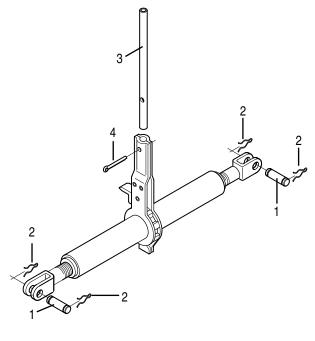


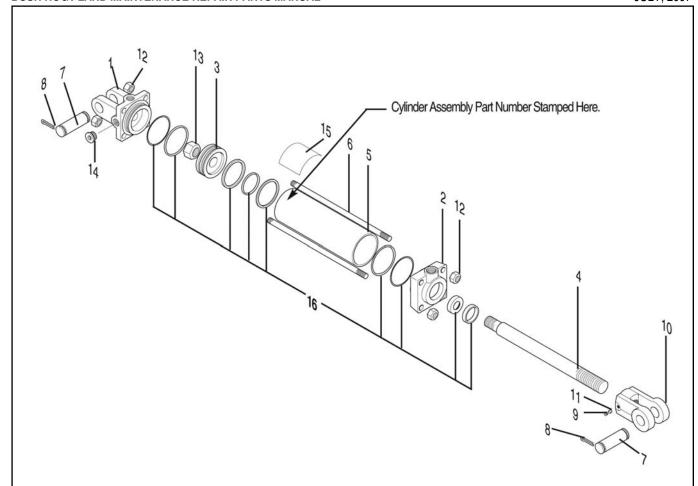

50017492 HYDRAULIC CYLINDER

For MLR Landscape Rake
Mfd. by Monarch
2" Bore x 8" Stroke 1.125" Rod Dia.
3/4" – 16 ORB Ports
Replaced by 50047479 Hydraulic Cylinder

REF. NO.	PART No.	QTY.	DESCRIPTION
1	95458	1	Clevis Cap
2	95457	1	Rod Cap
3	95460	1	Piston .
4	95459	1	Rod 1.125" Dia.
4 5	95454	1	Cylinder Tube
6	95455	4	Tie Rod
7	95425	2	Pin 1" Dia.
8	21020614	4	Cotter Pin 3/16" x 1 1/2"
9	95433	1	Thread Lock
10	95456	1	Rod Clevis 1.125" x 1"
11	95422	1	Set Screw 3/8" x 1/2 Knurled
12	8151200	8	Hex Nut 3/8"
13	95452	1	Hex Nut 3/4" UNF
14	95435	1	Plug 3/4"
15	95423	1	Caution Decal
16	50017620	1	Seal Kit

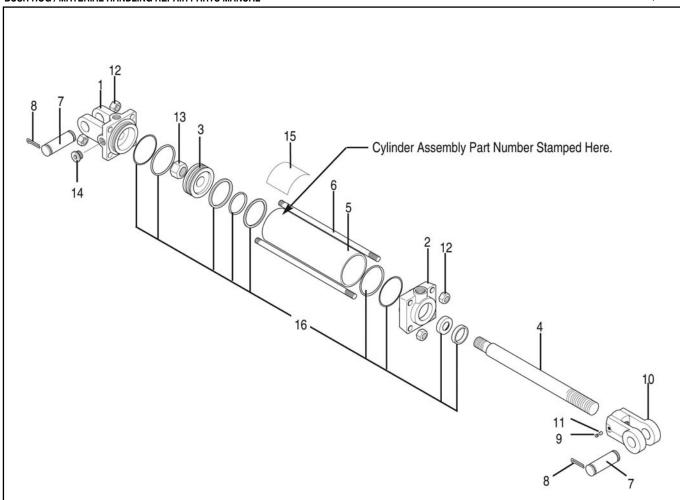


50047479 HYDRAULIC CYLINDER

Mfd. by Bailey
2" Bore x 8" Stroke, 1.125" Rod Dia.

3/4"-16 UNF Ports

REF. NO.	PART NO.	QTY.	DESCRIPTION
1		1	Clevis Cap
2		1	Rod Cap
3		1	Piston [']
4		1	Rod 1.25" Dia.
5		1	Cylinder Tube
6		4	Tie Rod
7		2	Pin 1" Dia.
8		4	Cotter Pin 3/16" x 1 1/2"
9		1	Thread Lock
10		1	Rod Clevis 1.25" x 1"
11		1	Set Screw 3/8" x 1/2 Knurled
12		8	Hex Nut 5/8" UNF
13		1	Hex Nut 1"-14
14		1	Plug 3/4"
15		1	Caution Decal
16	50017620	1	Seal Kit for 2" Bore

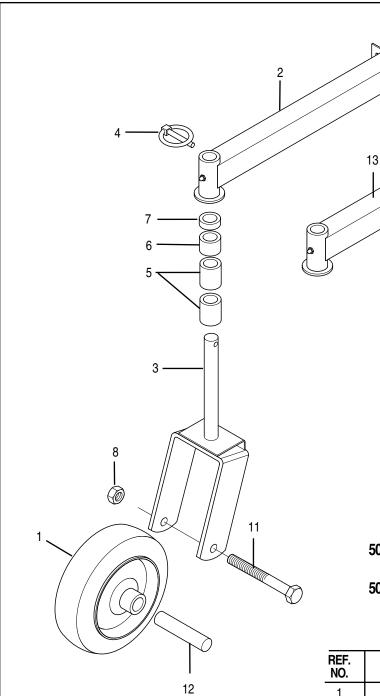

50017283 GAUGE WHEEL ASSEMBLY MLR60, MLR72, MLR84 & MLR96

50047898 GAUGE WHEEL ASSEMBLY For MLR72-1, MLR84-1, MLR96-1, LLR60, LLR72, LLR84

REF. NO.	PART NO.	QTY.	DESCRIPTION
1	88957	1	Tire Assy.
2	99316	1	Caster Arm Assembly (MLR60, MLR72, MLR84, MLR96)
3	99315	1	Caster
4	20312	1	Pin
4 5	99314	2	Spacer 1 1/2"
6	84613	1	Spacer 1"
7	84612	1	Spacer 1/2"
8	9161600	1	Locknut 1/2"
9	9131200	4	Locknut 3/8"
10	1161220	4	Capscrew 3/8" x 2" Gr.5
11	20776	1	Capscrew 1/2" x 6" Gr.5
12	88970	1	Sleeve
13	50047896	1	Caster Arm Assembly (MLR72-1, MLR84-1, MLR96-1

